


PARTS

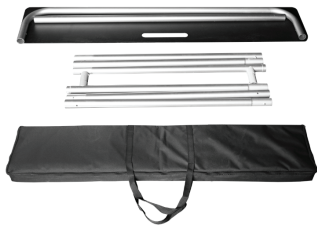

(A) Waveline Bannerstand
(Case, Hardware, & Graphic)



(B) Sanitizer Dispenser



(C) Acrylic Tray



(D) Allen Key



(E) x2 Screws



(F) x2 Flange Screws



(G) x2 Thumb Screws



(H) Horizontal Bar



(I) Vertical Bar



(J) Extension Bar & Brackets
(only with 90" models)

ASSEMBLY

1

(A)

Assemble the Waveline Bannerstand **(A)** frame by connecting the tubes together and set aside.

2

(H) **(I)** **(D)**

Assemble T-Bar by sliding Horizontal bar **(H)** into butterfly piece on the end of the Vertical bar **(I)**. Center and tighten with Allen Key **(D)**.

3
90" DISPLAY ONLY

(I) **(J)** **(E)**

Adding extension for 90" display: Slide the brackets on the Extension Bar **(J)** into the sides of the Vertical Bar **(I)** and secure in place with one Screw **(E)** on each side.

4

(G)

Attach the T-Bar to Waveline frame. Align the holes of the T-Bar to the underside of the top pole of the Waveline frame and screw in from the bottom using 2 thumb screws **(G)**.

5

Place graphics over the display and zipper at the bottom.

6

(D)

Thread the screws through the base plate into the bottom of the frame in step using the Allen Key **(D)**.

7

(F) **(C)**

Find the 2 small slits in the graphic and place the Acrylic Tray **(C)** up against them. Align the holes on the T bar, graphic, and acrylic tray. Use 2 Flange Screws **(F)** and attach the tray to the T bar through the graphic.

8

PLEASE SEE SANITIZER DISPENSER USER GUIDE FOR IMPORTANT SETUP AND SAFETY INFORMATION

(C) **(B)**

Setup Sanitizer Dispenser **(B)** before attaching to acrylic tray **(C)**. Slide dispenser onto the pre-placed screws on the acrylic tray.

9

Enjoy.

NOTICE:
REMOVE THE SANITIZER DISPENSER FROM THE DISPLAY BEFORE REFILLING LIQUID
DO NOT LAY FILLED DISPENSER FLAT TO AVOID SPILLS